

MILLTRONICS

ACCUMASS BW100

Instruction Manual PL-531

January 2001



ACCUMASS BW100

Safety Guidelines

Warning notices must be observed to ensure personal safety as well as that of others, and to protect the product and the connected equipment. These warning notices are accompanied by a clarification of the level of caution to be observed.

Qualified Personnel

This device/system may only be set up and operated in conjunction with this manual. Qualified personnel are only authorized to install and operate this equipment in accordance with established safety practices and standards.

Warning: This product can only function properly and safely if it is correctly transported, stored, installed, set up, operated, and maintained.

Note: Always use product in accordance with specifications.

Copyright Siemens Milltronics Process Instruments Inc. 2000. All Rights Reserved

Disclaimer of Liability

This document is available in bound version and in electronic version. We encourage users to purchase authorized bound manuals, or to view electronic versions as designed and authored by Siemens Milltronics Process Instruments Inc. Siemens Milltronics Process Instruments Inc. will not be responsible for the contents of partial or whole reproductions of either bound or electronic versions.

While we have verified the contents of this manual for agreement with the instrumentation described, variations remain possible. Thus we cannot guarantee full agreement. The contents of this manual are regularly reviewed and corrections are included in subsequent editions. We welcome all suggestions for improvement.

Technical data subject to change.

MILLTRONICS® is a registered trademark of Siemens Milltronics Process Instruments Inc.

Contact SMPI Technical Publications at the following address:

Technical Publications
Siemens Milltronics Process Instruments Inc.
1954 Technology Drive, P.O. Box 4225
Peterborough, Ontario, Canada, K9J 7B1
Email: techpubs@milltronics.com

For the library of SMPI instruction manuals, visit our Web site: www.milltronics.com

TABLE OF CONTENTS

About This ...		
About This Manual		5
About ACCUMASS BW100		6
Specifications		7
Installation		
Dimesions		9
Interconnection	System Diagram	10
	Terminal Block Layout	11
	Load Cell - Single	12
	Load Cell - Dual	13
	Speed Sensor	14
	Auto Zero	15
	Remote Totalizer 1	15
	Analog Output	15
	Remote Totalizer 2	16
	Relay Output	16
	Communication	CVCC 17
		BIC-2 17
	Power Connections	18
	Converter	19
	Units Sticker	19
Start Up		
Orientation		21
Program Mode		22
Maneuvering		22
Master Reset		25
Balance		26
Quick Start		28
Start Up		29
	Zero Calibration	31
	Span Calibration	32
	Run Mode	33

Recalibration	
Belt Speed Compensation	35
Material Tests	36
Design Changes	37
Recalibration	38
Routine Zero	38
Initial Zero	39
Direct Zero	40
Routine Span	41
Initial Span	42
Direct Span	43
Factoring	44
Linearization	45
Operation	
Load Sensing	49
Speed Sensing	49
Modes of Operation	49
Damping	50
Analog Output	50
Relay Output	51
Totalization	52
Auto Zero	53
Communication	53
Protocol	54
Parameter Description	57
Appendices	
Alphabetical Parameter List	77
Troubleshooting	80
Maintenance	82
Software Updates	82
Program Record	83

ABOUT THIS MANUAL

It is essential that this manual be referred to for proper installation and operation of your BW100 belt scale integrator. As BW100 must be connected to a belt scale, and optionally a speed sensor, refer to their manuals as well.

- | | |
|----------------------|--|
| <i>Installation</i> | gives you step by step direction for the installation and interconnection of your BW100. |
| <i>Start Up</i> | instructs you how to operate the keypad, read the display, do a Quick Program, and perform the calibration for a successful entry into the run mode. |
| <i>Recalibration</i> | emphasizes how to optimize and maintain accurate operation of your weighing system through material tests and routine recalibrations. |
| <i>Operation</i> | offers an overview of the BW100 features and functions that allow you to take full advantage of your weighing system. |
| <i>Parameters</i> | lists the parameters available to you, with a description of their function and use. You are urged to read this section; to familiarize yourself with the parameters available to you and get your BW100 working to its fullest. |
| <i>Appendices</i> | what manual would be complete without one! Ours has an alphabetical cross reference of the parameters to their numbers, a diagnostic help with the list of error messages, a maintenance reminder, and a record sheet for jotting down parameter values. |

ABOUT THE ACCUMASS BW100


The ACCUMASS BW100 is to be used only in the manner outlined in this instruction manual.

The ACCUMASS BW100 is a microprocessor based integrator designed for use with Milltronics, or equivalent belt scales. The speed and load signals from the conveyor and scale, respectively, are processed to derive rate of material flow and totalization. The primary values of speed and load, and the derived values of rate and total are available for display on the local LCD, or as output in the form of analog mA, alarm relay and remote totalization.

BW100 supports Milltronics proprietary bipolar current loop for long distance communication to PLC or computer via BIC-2, RS -232 or RS -422 converter. It is also compatible with Milltronics Dolphin interface for remote display, programming and software upgrading.

ACCUMASS BW100 features:

- ✓ multi-field LCD display
- ✓ two remote totalizer contacts
- ✓ current loop to RS-232 or RS-422
- ✓ Dolphin compatibility
- ✓ programmable relay
- ✓ isolated mA output
- ✓ rate linearization
- ✓ local keypad
- ✓ auto zero

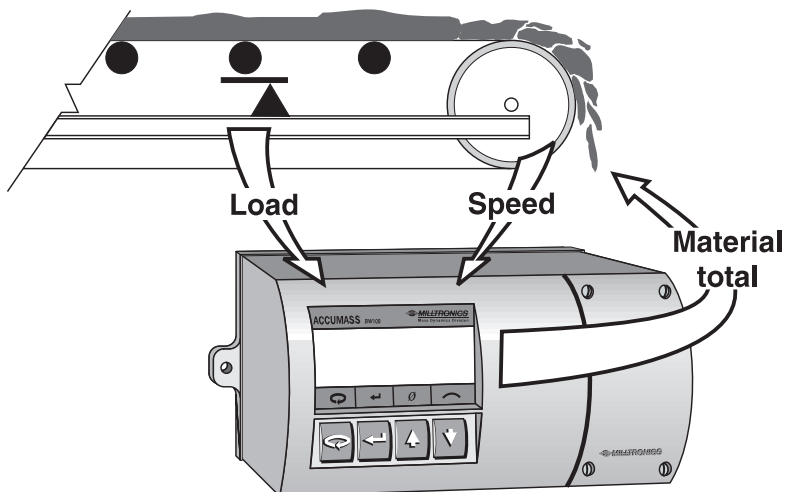

SPECIFICATIONS

- Power:**
- » standard: » 100/115/200/230 V ac±15%, 50/60 Hz, 15 VA
 - » optional: » 10 - 15 V dc, 15 W
 - » 18 - 30 V dc, 15 W
- Application:** » compatible with Mass Dynamics belt scales MSI, MSL, MMW and MIC, or equivalent
- Accuracy:** » 0.1% of full scale
- Resolution:** » 0.02% of full scale
- Environmental:**
- » location: » indoor / outdoor
 - » altitude: » 2000 m max
 - » ambient temperature: » -20 to 50 °C (-5 to 122 °F)
 - » relative humidity: » suitable for outdoor (Type 4X / NEMA 4X / IP 65 enclosure)
 - » installation category: » II
 - » pollution degree: » 4
- Enclosure:**
- » polypropylene alloy
 - » Type 4X / NEMA 4X / IP 65
 - » sealed electronics compartment
 - » integral junction box with termination block for 0.2 - 4 mm² solid
 - » or 0.2 - 2.5 mm² stranded (12 - 24 AWG)
- Programming:** » via local 4 member keypad with silicone boot and/or Dolphin interface
- Display:** » 38 x 100 mm (1.5 x 4") multi-field liquid crystal display
- Memory:**
- » program stored in non-volatile FLASH memory, upgradable via Dolphin interface
 - » parameters stored in non-volatile EEPROM
- Inputs:**
- » load cell: » 0 - 45 mV dc per load cell
 - » speed sensor: » pulse train: 0-5 V low, 0-15 V high, 1 to 2000 Hz,
or
» open collector switch,
or
» relay dry contact
 - » auto zero: » dry contact from external device
- Outputs:**
- » analog: » optically isolated 0/4 - 20 mA
 - » 750 Ω max loading
 - » resolution: 0.1% of 20 mA
 - » load cell: » 10 V dc compensated for strain gauge type,
2 cells max
 - » speed sensor: » 12 V dc, 50 mA max excitation

- » remote totalizer 1: » contact closure 32 - 288 ms duration
 - » open collector switch rated 30 V dc, 100 mA max
- » remote totalizer 2: » contact closure 32 - 288 ms duration
 - » open collector switch rated 240 V ac/dc, 100 mA max
- » relay output:
 - » programmable function
 - » 1 form 'C' SPDT relay contact rated 5 A at 250 V ac, non- inductive

Communications: » proprietary bipolar current loop via BIC-2 or CVCC loop length (refer to Options) » Dolphin compatible

- Cable/Separation: » single load cell:
 - » non-sensing: » Belden 8404, 4 wire shielded, 20 AWG or equivalent, 150 m (500 ft) max
 - » sensing: » Belden 9260, 6 wire shielded, 20 AWG or equivalent, 300 m (1000 ft) max
 » dual load cell:
 - » non-sensing: » Belden 9260, 6 wire shielded, 20 AWG or equivalent, 150 m (500 ft) max
 - » sensing: » Belden 8418, 8 wire shielded, 20 AWG or equivalent, 300 m (1000 ft) max
 » speed sensor: » Belden 8770, 3 wire shielded, 18 AWG or equivalent, 300 m (1000 ft)
 » auto zero: » Belden 8760, 1 pair, twisted/shielded, 18 AWG, 300 m (1000 ft) max
 » bipolar current: » Belden 9552, 2 pair, twisted/shielded, 18 AWG, (comm. port) 3000 m (10,000 ft) max loop
 » remote total » Belden 8760, 1 pair, twisted/shielded, 18 AWG, 300m (1000 ft) max or as required to suit local [electrical code](#)

- Options:
- » Speed Sensor: » Mass Dynamics MD-36 or TASS, or equivalent
 - » Dolphin: » Milltronics Windows based software interface and infrared ComVerter link.
 - » CVCC: » Milltronics bipolar loop to RS-232 or RS-422 passive converter, communications interface
 - » BIC-2: » Milltronics bipolar loop to RS-232 or RS-422 buffered converter, communications interface, max 6 BW100 per BIC-2
 - » Mass Dynamics Incline Compensator, for signal compensation on variable incline conveyors

Approvals: » CE*, CSA NRTL/C


*EMC performance available upon request

INSTALLATION


Installation shall only be performed by qualified personnel and in accordance with local governing regulations.

This product is susceptible to electrostatic shock. Follow proper grounding procedures.

DIMENSIONS

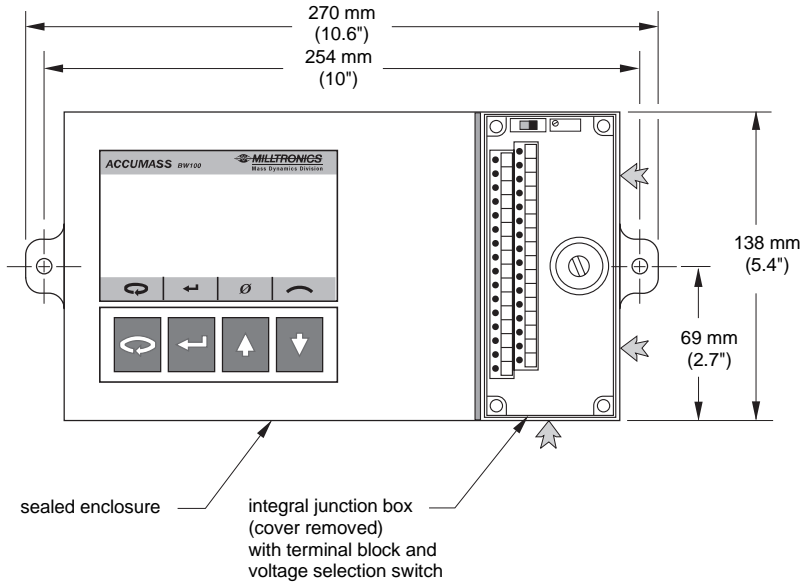

➔ Conduit entry area. Recommend drilling the enclosure with a hole saw and the use of suitable cable glands to maintain ingress rating.

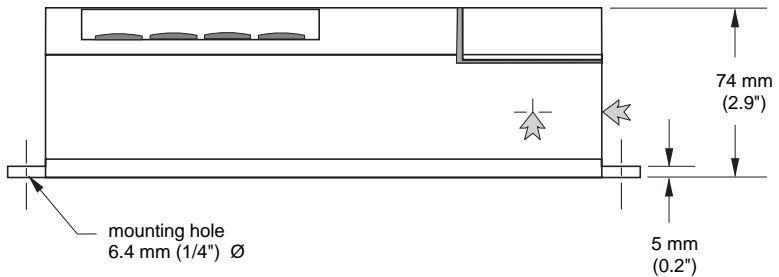


Non metallic enclosure does not provide grounding between connections. Use grounding type bushings and jumpers.

INTERCONNECTION

Wiring may be run via common conduit. However these may not be run in the same conduit as high voltage contact or power wiring.


SYSTEM DIAGRAM

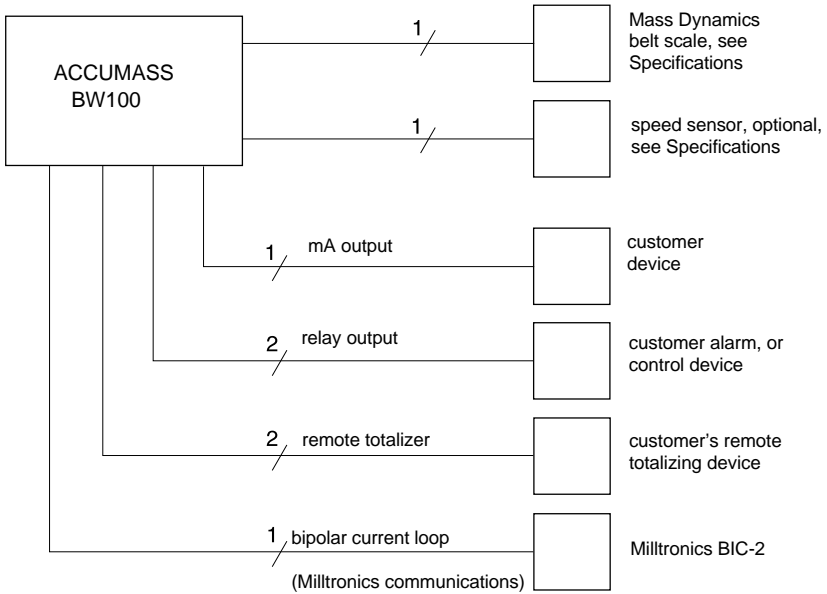



Typical system capability. Not all components or their maximum quantity may be required.

TERMINAL BLOCK LAYOUT

ac supply

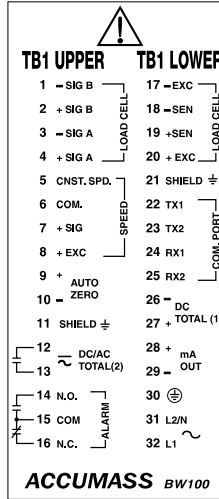

dc supply

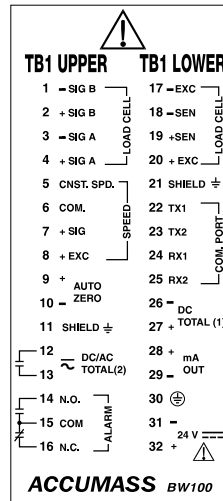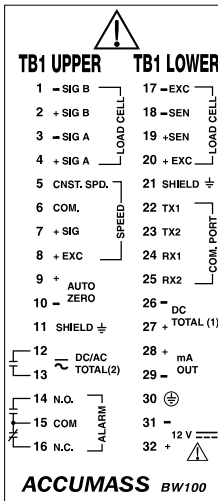


All field wiring must have insulation suitable for at least 250 V.



dc terminals shall be supplied from an SELV source in accordance with IEC-1010-1 Annex H.

LOAD CELL - SINGLE

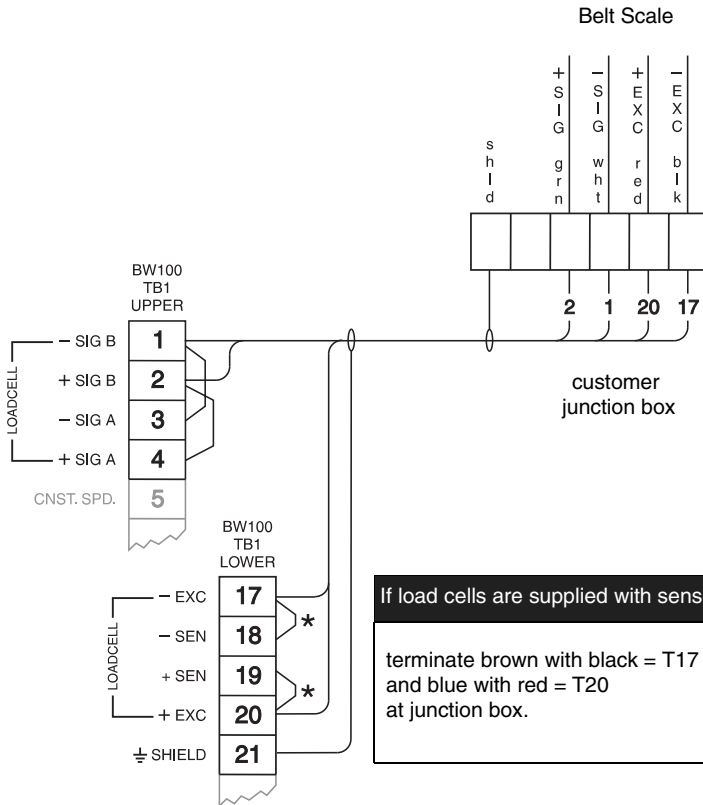


INSTALLATION

* Where separation between the BW100 and belt scale exceeds 150 m (500 ft) :

- » remove the jumpers BW100 TB1 – 17/18 and TB1 19/20
- » run additional conductors from :
 - » BW100 TB1 – 18 to scale ‘- EXC’
 - » BW100 TB1 – 19 to scale ‘+ EXC’


LOAD CELL - DUAL

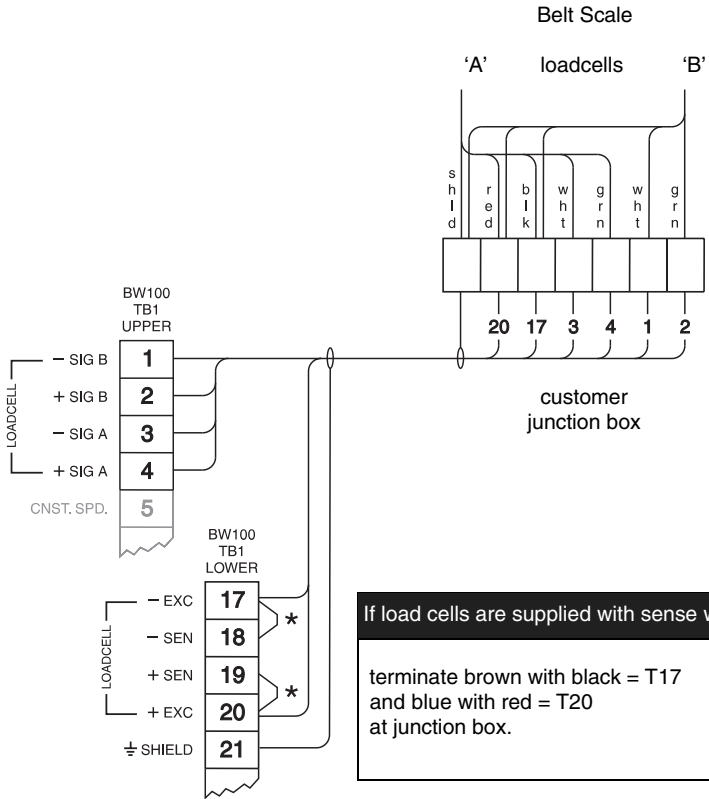

* Where separation between the BW100 and belt scale exceeds 150 m (500 ft) :

- » remove the jumpers BW100 TB1 – 17/18 and TB1 19/20
- » run additional conductors from :
 - » BW100 TB1 – 18 to scale '- EXC'
 - » BW100 TB1 – 19 to scale '+ EXC'

SPEED SENSOR

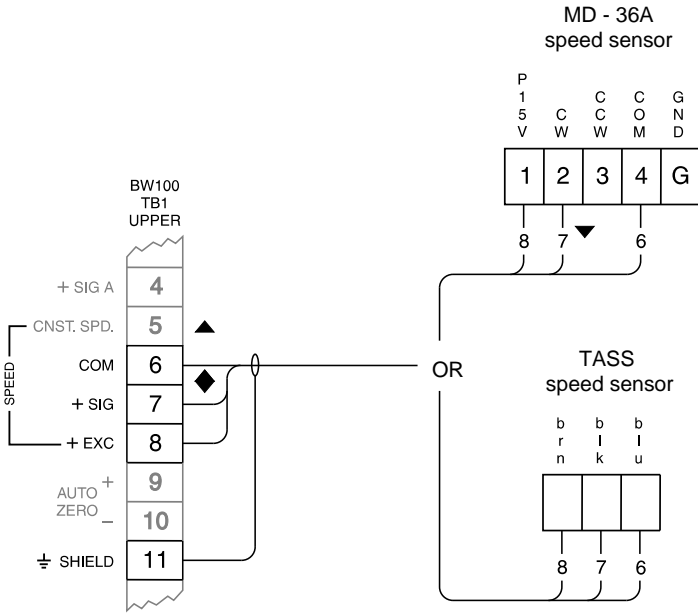


- ▼ Connect the BW100 TB1 – 7 to the MD - 36A speed sensor terminal:
 - '2' for clockwise speed sensor shaft rotation
 - '3' for counter-clockwise speed sensor shaft rotation.


MD - 36A shaft rotation is viewed from the front cover side of the MD - 36A enclosure.

- ▲ If a speed sensor is not used, a jumper must be connected across the BW100 TB1 – 5 / 6. If a speed sensor is used, insure that the jumper is removed.
- ◆ Input device in the form of open collector transistor or dry contact across TB1 – 6 / 7 will also serve as a suitable speed signal.


AUTO ZERO

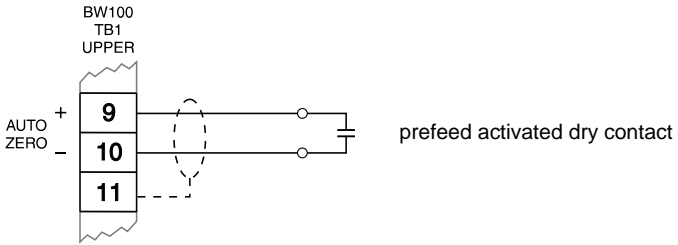


REMOTE TOTALIZER 1

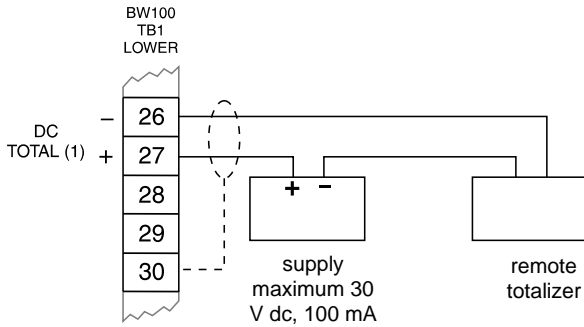


ANALOG OUTPUT

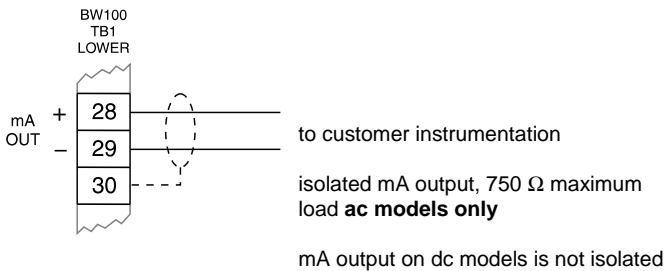

REMOTE TOTALIZER 2

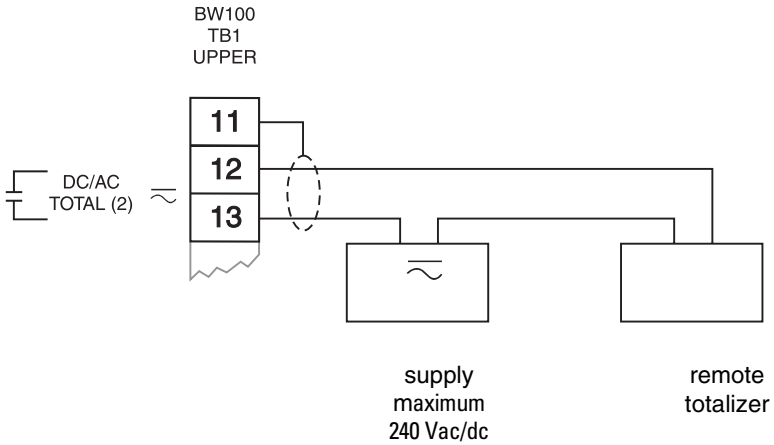


RELAY OUTPUT

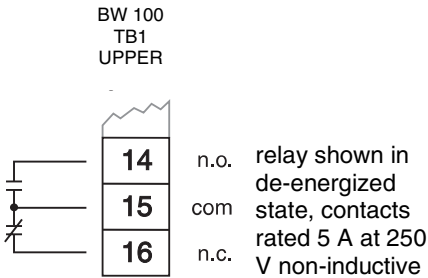


Installation

COMMUNICATION

CVCC

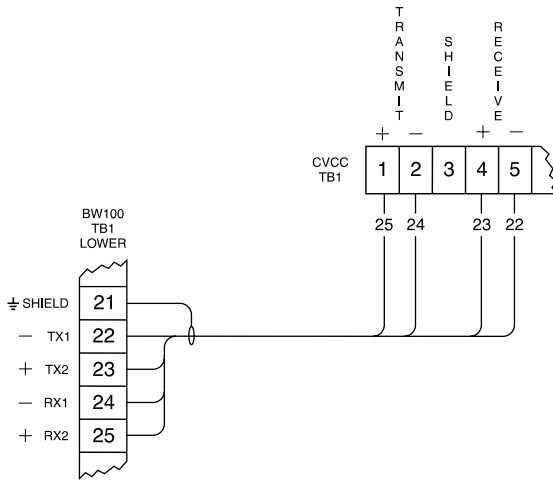

BIC-2


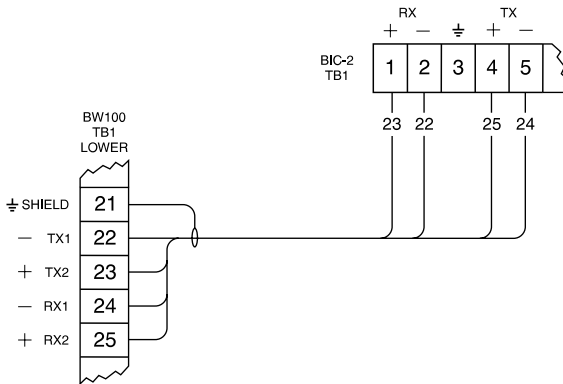


Connect shield at one device only, e.g. BW100 TB1 – 21.

Maximum loop length 3000 m (10,000 ft).

POWER CONNECTIONS

AC POWER

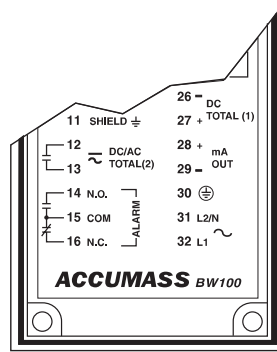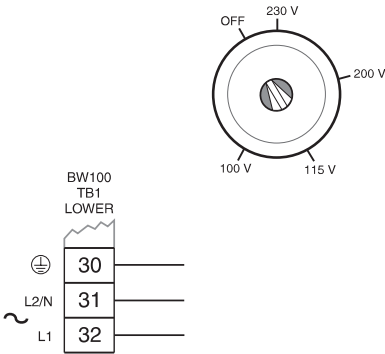


The equipment must be protected by a 15 A fuse or a circuit breaker in the building installation.

A circuit breaker or switch in the building installation, marked as the disconnect switch, shall be in close proximity to the equipment and within easy reach of the operator.


DC POWER

12 V dc Model

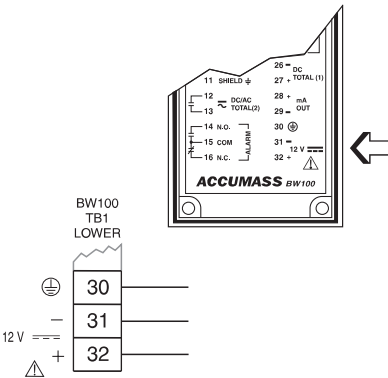

10 - 15 V dc

24 V dc Model

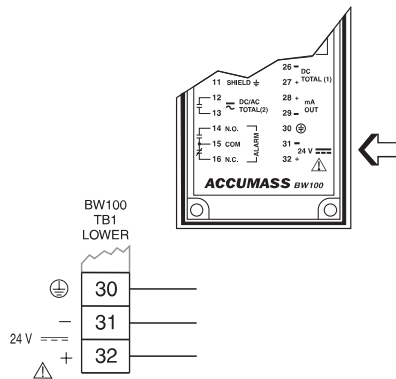

18 - 30 V dc




dc model indicated on lid nameplate.



dc terminals shall be supplied from an SELV source in accordance with IEC-1010-1 Annex H.


COMVERTER

Optional Dolphin Interface

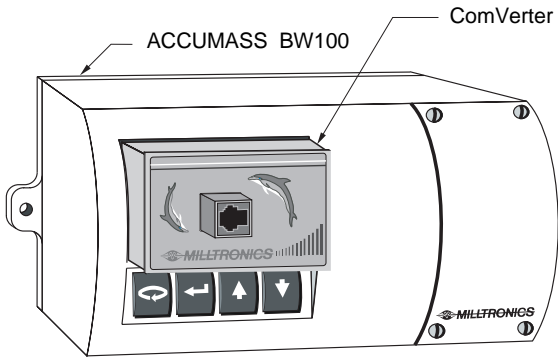

Refer to Dolphin instruction manual for interconnection details.

UNITS STICKER

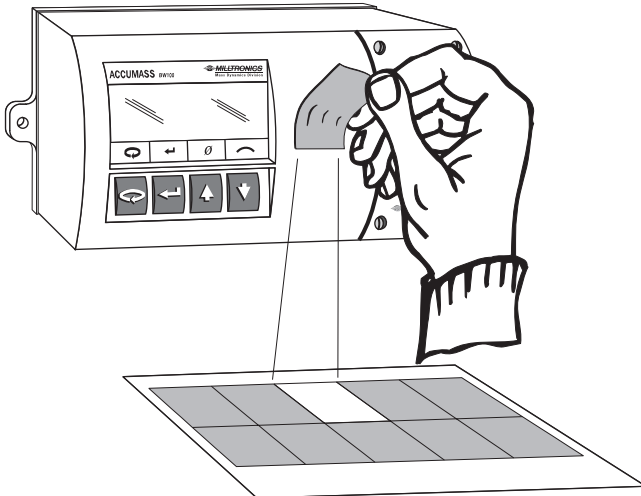

Remove the appropriate 'units' sticker from the sheet supplied, and affix to your BW100 as shown.




START UP


For successful start up, insure that all related system components such as belt scale and speed sensor are properly installed and connected.

ORIENTATION

Display and Keypad

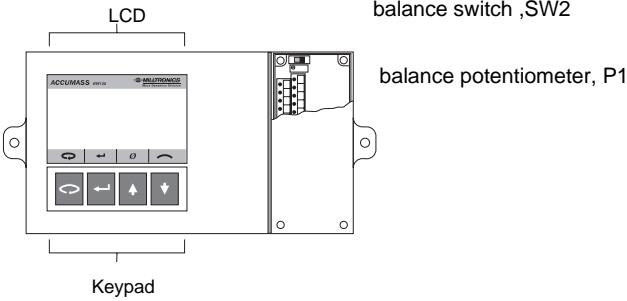

 
The BW100 operates under two modes: 'run' and 'program'. When the unit is initially powered, it starts in the program mode.



If the program mode is idle, it reverts to the run mode after 10 minutes.

Program Mode

LCD

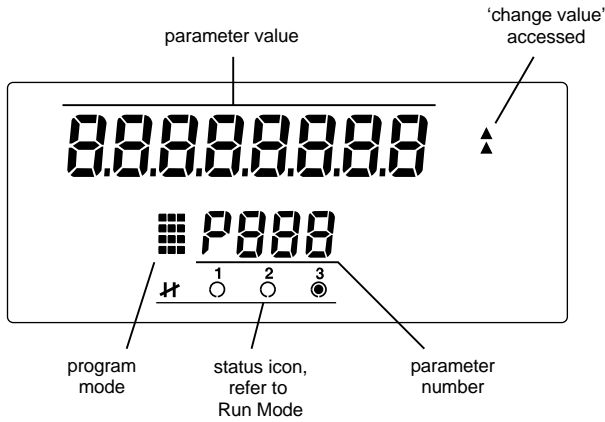

KeyPad



access run mode



alternates program mode between 'select parameter' and 'change value' functions



scroll up



 
 
scroll down

MANEUVERING


To Select a Parameter:

if not in the program mode


from the run mode



if in the program mode

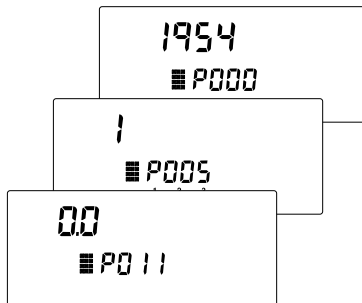


Speed Scroll

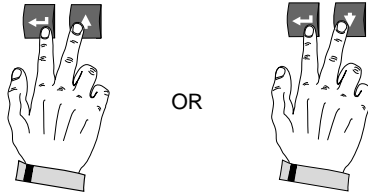


To speed scroll up or down press the up or down key and hold, then press the enter key and hold. Release to stop.

To Change a Parameter Value :

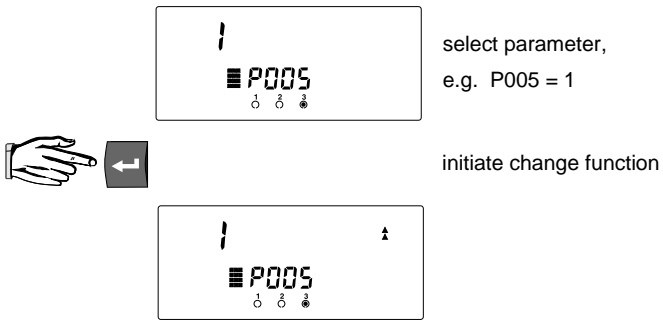

Security Must Be Disabled

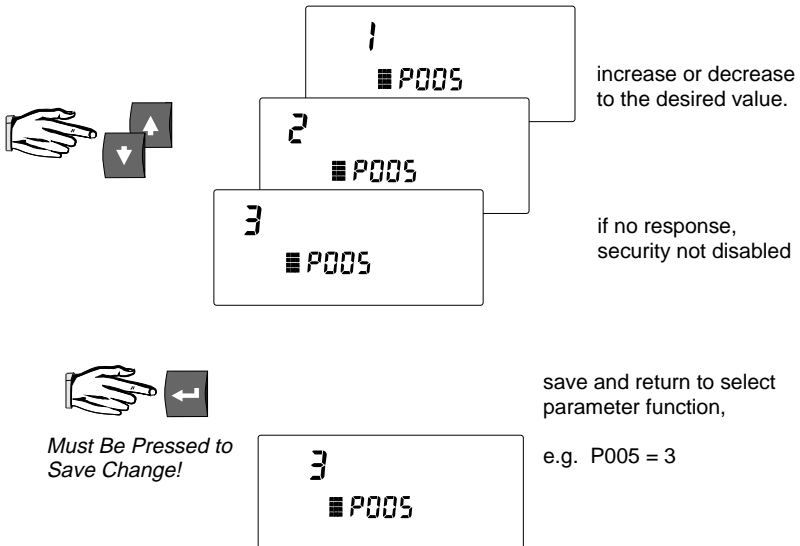

Express :

Parameter
to jump back to P005

or

Value
to jump to the factory setting



e.g. P999



 
jump back to P005



To Access Run Mode :




e.g. from the program mode, P005



exit and return to run mode

To Access the Program Mode :

 from the run mode



e.g. rate display



last parameter from
previous program session
e.g. P005

MASTER RESET


Prior to programming, balancing and calibration, a master reset of the BW100 should be done.

Refer to Parameters \ P999.

BALANCE


If you are operating a dual load cell belt scale, it is recommended that the load cells be balanced electronically prior to initial programming and calibration, or after either or both load cells have been reinstalled or replaced.

Unbalanced load cells adversely affect the performance of your belt conveyor weighing system.

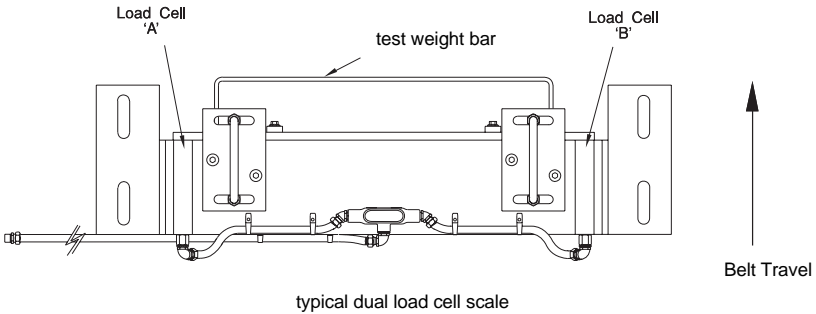


With the conveyor stopped and locked out, lift the belt off the weighing idlers.

Place the BW100 into the program mode at P291.

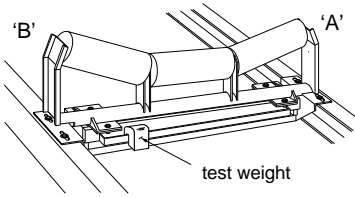

test weight on
load cell 'B' side

 

SW2

'close'

select P291 ensure SW2
is closed



SW2

'open'


enter and auto advance to P292,
open SW2




SW2

'open'

enter and auto advance to P293,
leave SW2 open

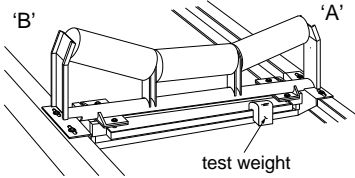

test weight on
load cell 'A' side

 

SW2

'close'

enter and auto advance to P294,
close SW2



P1

enter and auto advance to P295

adjust until
 $## = 0 \pm 5$


Remove the test weight, insure that the BW100 SW2 is in 'close' position and that P1 is left as set.

Performing a balance procedure requires a subsequent zero and span recalibration.

QUICK START

Quick Start parameters (P005 to P017) must be programmed for all applications.

Have your design data sheet or program record handy!

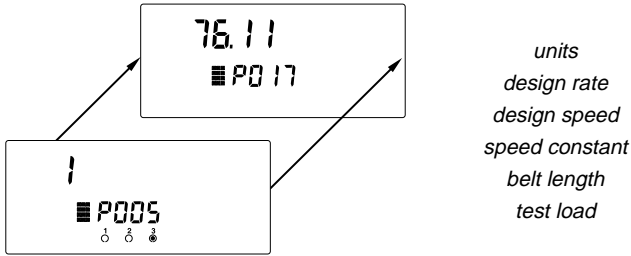

Upon completion of Quick Start programming, a Zero and Span calibration are required for successful entry into the run mode.


START UP

Program P005 - P017

refer to Maneuvering for parameter selection and changing values.



program mode P005, units
e.g. 1, t/h

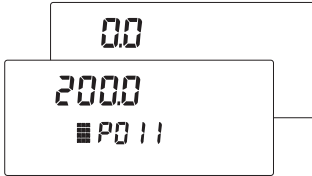

P011, design rate *
e.g. 200 t/h

* from design data sheet, if provided



P014, design speed *
e.g. 0.5 m/s


▲ for constant speed applications, TB1 - 5/6 jumpered, value is locked at 100.



P015, speed constant * ▲
e.g. 100.3 pulse / m



P016, belt length
e.g. 65.72 m

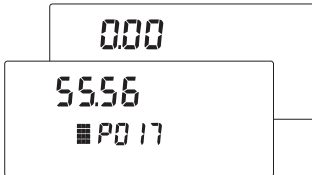


P017, test load *
e.g. 55.56 Kg / m

examples are typical

Test load value should be less than design load (P952). If not, contact Milltronics or their agent.

Calibration Note

 The duration of Zero and Span Calibration is dependent upon speed (P014), length (P016) and revolutions (P360) of belt.




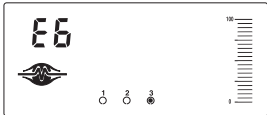

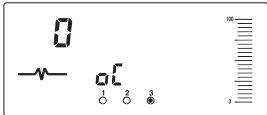




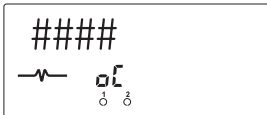
To cancel a Zero or Span calibration in progress,



and return to the run mode.

Zero Calibration


Run the conveyor for several minutes to warm up the belt and insure that it is empty. Test weights are not used during a zero calibration.

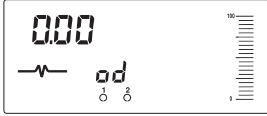		zero calibration required
		initial zero count
		zero calculation, frequency count displayed
		zero deviation calculated, initial deviation = 0
		zero deviation accepted, initial zero count = ### Record this value for future reference

Perform Span Calibration,
see next page

Span Calibration

 
Run the conveyor until the belt is empty and stop it. Suspend the test weight from the scale per its instruction manual. Run the conveyor belt empty.




initial span count



 span calculation,
frequency count displayed




 span deviation calculated
initial deviation = 0



span deviation accepted
initial span count = ####
**Record this value for
future reference**

 Remove the test weight when the Span calibration is complete.




Run

successful entry into run,
display rate

Run Mode

LCD

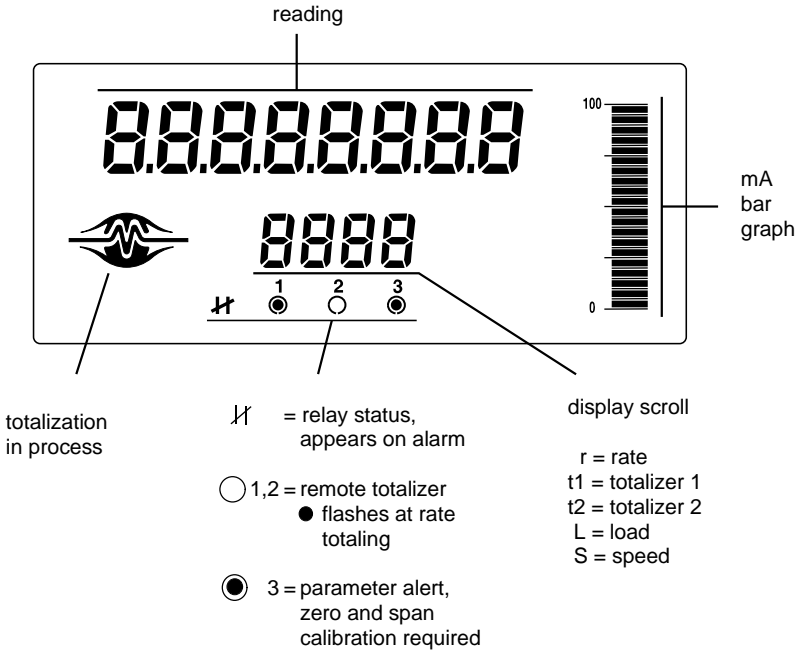

Keypad



access program mode



scroll display



initiate zero



initiate span



 
RECALIBRATION

BELT SPEED COMPENSATION

In order to achieve optimum accuracy in the rate computation, the belt speed displayed must equal that of the actual belt speed. As the speeds are likely to differ, a belt speed compensation should be performed.

Run the conveyor with the belt empty.

View the belt speed.



run mode \ speed display,
e.g. 0.750 m/s

 
Stop the conveyor and measure a length of the belt; marking the forward end (start time) and the back end (stop time). Use the belt scale as the stationary reference.

Run the belt and measure the time for the belt length to pass over the scale.

$$\text{speed} = \frac{\text{belt length}}{\text{time}} \quad \begin{matrix} \text{m or ft} \\ \text{s} \quad \text{min} \end{matrix}$$

Refer to maneuvering for parameter selection and value change.

with conveyor
running empty



program mode –
assumed speed
e.g. 0.75 m/s



enter calculated speed
e.g. 0.8 m/s



jumps to P014 or P015
showing new value

If the BW100 constant speed input (TB1-5/6) is jumpered, the design speed (P014) is automatically adjusted.

If the a speed sensor is connected, the speed constant (P015) is automatically adjusted.

The display speed (used in the rate computation) now equals the actual speed.



Record the new value in Appendices\Program Record.

MATERIAL TESTS

Material tests are performed to verify the accuracy of the of the span calibration. If the material tests indicate a repeatable deviation exists, a manual span adjust (P019) is then performed. This procedure automatically alters the span calibration and adjusts the test load (P17) value, yielding more accurate span recalibrations.

Test weights are NOT used during material tests.

- » Run the belt empty.
- » Perform a zero calibration.
- » Put the BW100 into run mode
- » Record the BW100 total as the start value _____ 🍷
- » Run material at a minimum of 50% of design rate over the belt scale for a minimum of 5 minutes.
- » Stop the material feed and run the conveyor empty.
- » Record the BW100 total as the stop value _____ 🍷
- » Subtract the start value from the stop value to determine the BW100 total
- » Weigh the material sample if not already known.

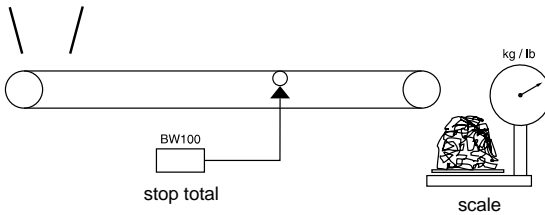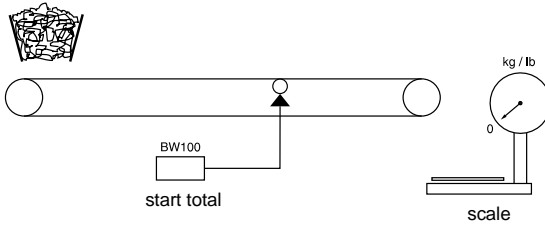

BW100 total = _____ 🍷 material sample weight = _____ 🍷

- » Calculate the span adjust value:


$$\% \text{ span adjust} = \frac{\text{BW100 total} - \text{material sample weight}}{\text{material sample weight}} \times 100$$

If the span adjust value is within the accuracy requirements of the weighing system, the material test was successful and normal operation can be resumed.

If the span adjust value is not acceptable, repeat the material test to verify repeatability. If the result of the second material test differs considerably, consult Milltronics or its agent.

If the span adjust values are significant and repeatable, perform a manual span adjust:

refer to maneuvering for parameter selection and value change

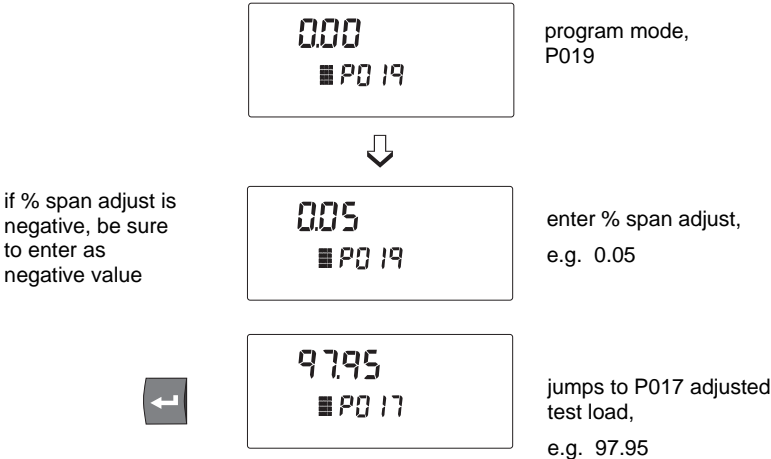

Verify the results of the span adjust by material test or return to normal operation.

DESIGN CHANGES

Where parameters have been changed with a resultant impact on the calibration or do not take effect until a recalibration is done, the parameter warning icon is displayed. In order to clear the icon, perform a zero and span recalibration after the reprogramming session is complete.


If significant changes have been made, an initial zero (P377) and/or initial span (P388) may be required.

RECALIBRATION

In order to maintain the accuracy of the weighing system, periodic zero and span recalibrations are required. Recalibration requirements are highly dependent upon the severity of the application. Perform frequent checks initially, then as time and experience dictate, the frequency of these checks may be reduced. Record deviations for reference.

Routine Zero

Run the conveyor empty for several minutes to warm up the belt and insure that it is empty. Test weights are not used during a zero calibration.

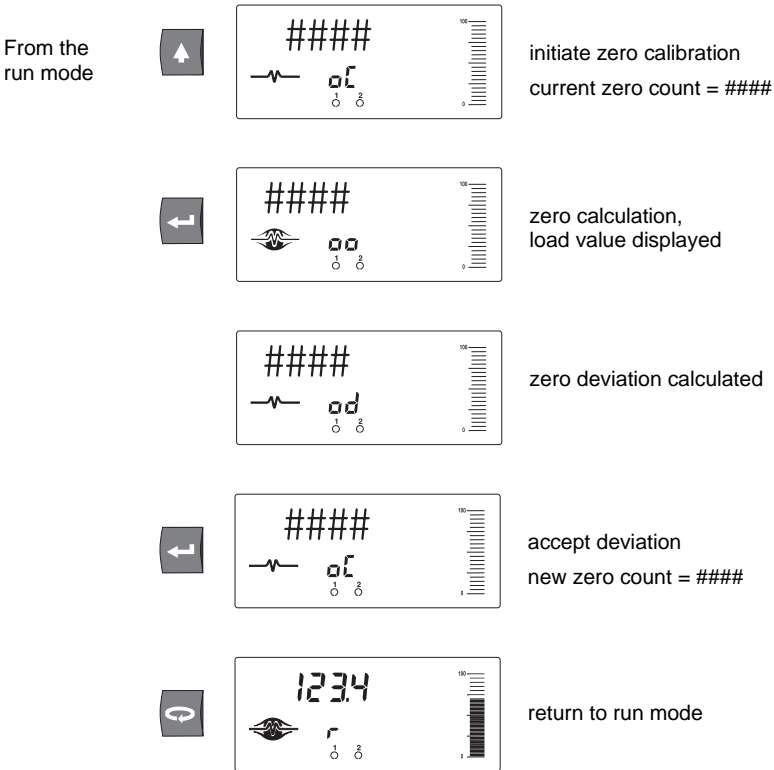

E3 is an indication that the mechanical system is errant. The use of P377, *initial zero*, should be used judiciously and only after a thorough mechanical investigation has been exercised.

The cause of the increased deviation must be found and rectified. A zero recalibration as previously described can then be retried.

If the operator deems this deviation to be acceptable, set P377 to 1 to invoke an initial zero calibration. Further deviation limits are now based on this new initial zero.

Initial Zero

An initial zero can be performed if deemed as a proper response to E3 message.

Refer to maneuvering for parameter selection and value change.

		select P377
		invoke initial zero, enter '1'
		current zero count
		zero calculation frequency count displayed
		zero deviation
		zero deviation accepted initial zero count = ####


Perform Initial Span

Direct Zero

Direct zero entry (P367) is intended for use when replacing software or hardware, and it is not convenient to perform an initial zero at that time.

A record of the last zero count is required.

Refer to maneuvering for parameter selection and value change.

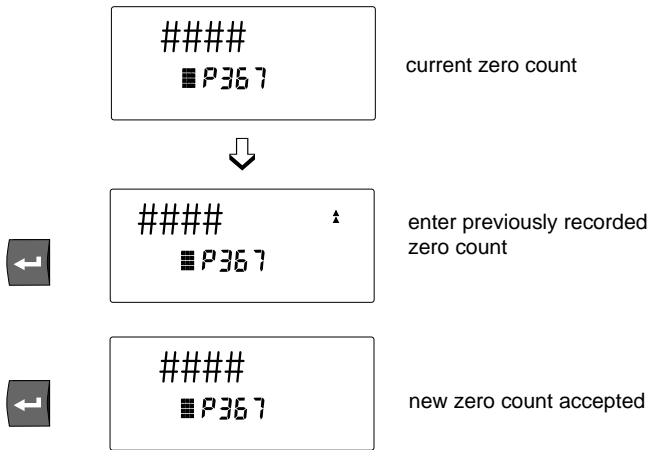


Routine Span


To perform a routine span recalibration, run the conveyor until the belt is empty and stop it. Suspend the test weights from the belt scale per its instruction manual.

Run the conveyor empty at maximum operating speed .

 
From the
zero calibration



 
initiate span calibration
current span count = ####



span calculation,
load value displayed

 

span deviation = ##%

 

accept deviation
new span count = ####



return to run mode

E6 is a reminder that a zero calibration is strongly suggested before a span calibration is initiated. Press enter to bypass this message.

E4 is an indication that the mechanical system is errant. The use of P388, *initial span*, should be used judiciously and only after a thorough mechanical investigation has been exercised.

The cause of the increased deviation must be found and rectified. A span recalibration as previously described can then be retried.


If the operator deems this deviation to be acceptable, set P388 to 1 to invoke an initial span calibration. Further deviations are now based on this new initial span.

Remove the test weight when the span calibration is complete.

Initial Span

An initial span can be performed if deemed as a proper response to E4 message.

Refer to maneuvering for parameter selection and value change.

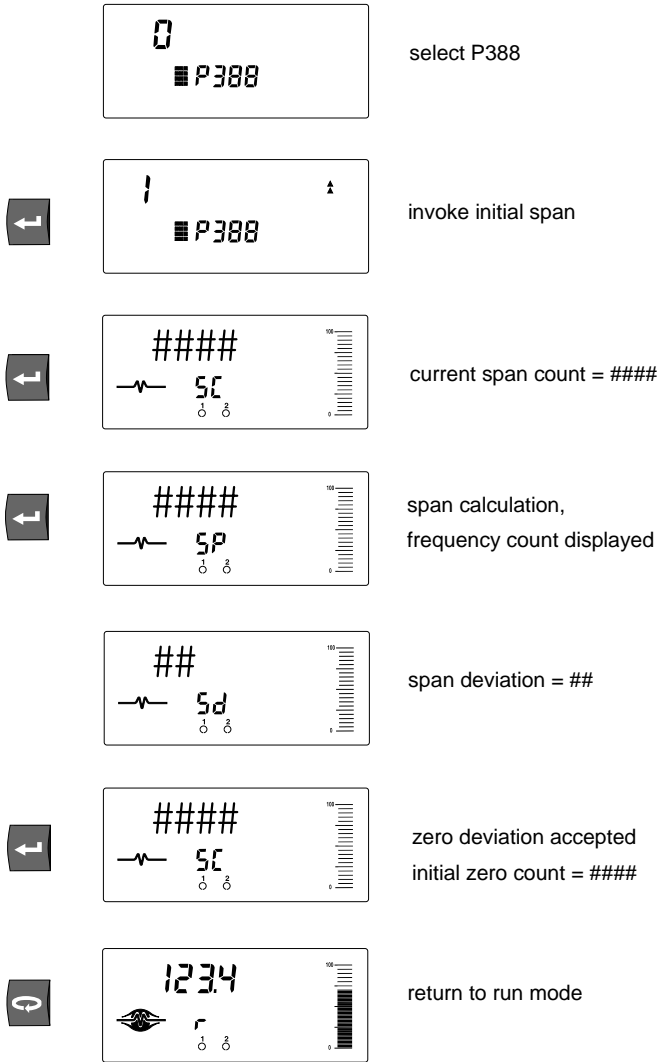


Direct Span

Direct span entry (P368) is intended for use when replacing software or hardware, and it is not convenient to perform an initial span at that time.

A record of the last span count is required.

Refer to maneuvering for parameter selection and value change.

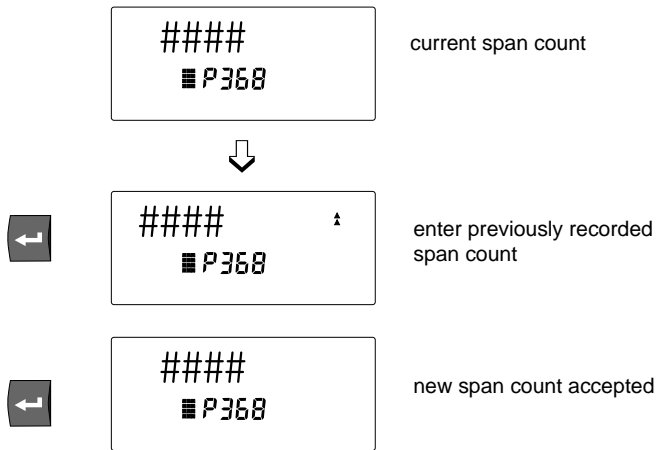

Factoring

In order to calculate the value of a new or unknown test weight to the current span, the factoring procedure is used.

For optimum accuracy in the factoring results, a routine zero calibration is recommended.

Refer to Maneuvering for parameter selection and value change.

 
With the conveyor stopped and the belt empty:



P359 selected




enter




initiated Factoring,
current test load value
e.g. 76.11 kg / m

 
hang new test weight onto
belt scale, then run the
conveyor empty



 dynamic test load value
e.g. 76.03 kg / m



 jumps to P017,
new test load value
e.g. 76.03 kg / m



return to run mode

Linearization

Conveyor applications where the belt scale is poorly located, or where there is a high degree of variation in belt tension, typically cause the belt scale to report load non-linearly. The BW100 provides a linearizing function (P390 - P396) in order to correct for the deficiency in the weighing system and to provide an accurate report of the actual process.

To verify that the cause of the non-linearity is not mechanical:

- » run the conveyor belt empty and stop it.
- » Suspend various test weights to the scale to verify mechanical linearity. If the load reported by the BW100 at these tests is non-linear, a mechanical problem is indicated. Refer to the belt scale manual in order to resolve the non-linearity by improved installation or repair.

If it is determined that the non-linearity is due to the weighing application, and not the actual belt scale, apply linearization by performing the following:

- » zero calibration
- » span calibration at 90 to 100% of design rate
- » material tests at 90 to 100% of design rate
- » manual span adjust if required
- » material tests at 1 to 3 intermediary flow rates where compensation is required.

Compensation points must be at least 10% of the design load apart.

E8 message occurs if a point is less than 10% of full scale or if points are less than 10% apart.

- » calculate the percentage compensation for each flow rate tested.

$$\% \text{ compensation} = \frac{\text{actual weight} - \text{totalized weight}}{\text{totalized weight}} \times 100$$

where: actual weight = material test
 totalized weight = BW100 total

Example :


A non-linearity with respect to the ideal response exists in a belt scale application with design rate of 200 t/h. It is decided to do material tests at 25, 50 and 75% of the design rate. After performing a zero and a span calibration at 100% of the design rate, followed by material tests and manual span adjust, three material tests were performed at 50, 100 and 150 t/h, as indicated by the BW100. The following data was tabulated. (This example is exaggerated for emphasis).

The material tests should be run at same belt speed, representative of normal operation; in this case 1.2 m/s. For each rate, record the corresponding load value by scrolling to the BW100 load display during running conditions or by calculation.

$$\text{load} = \frac{\text{rate}}{\text{speed}}$$

BW100 load kg/m	material test tonnes	BW100 total tonnes	compensation* %
11.6	4.2	4.9	-14.3
23.2	8.4	7.6	10.5
34.7	12.6	13.7	- 8.0

*calculation example: % compensation = $\frac{4.2 - 4.9}{4.9} \times 100$
= - 14.3

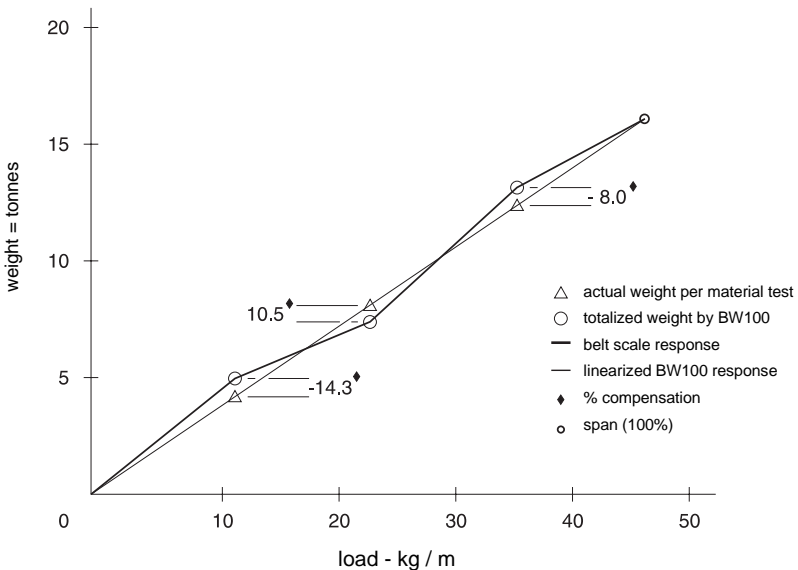


Program the BW100 as follows:

- P390 = 1
- P391 = 11.6
- P392 = - 14.3
- P393 = 23.2
- P394 = 10.5
- P395 = 34.7
- P396 = - 8

Often only one point of compensation is required, usually at a low load value. In the prior example, if compensation was only required at 11.6 kg/m, the programming could be as follows. Compensation is optimized by establishing the next load value that agrees with the material test, hence where compensation is zero and entering it as the next compensation point.

- P390 = 1
- P391 = 11.6
- P392 = - 14.3
- P393 = 23.2
- P394 = 0
- P395 = 34.7
- P396 = 0

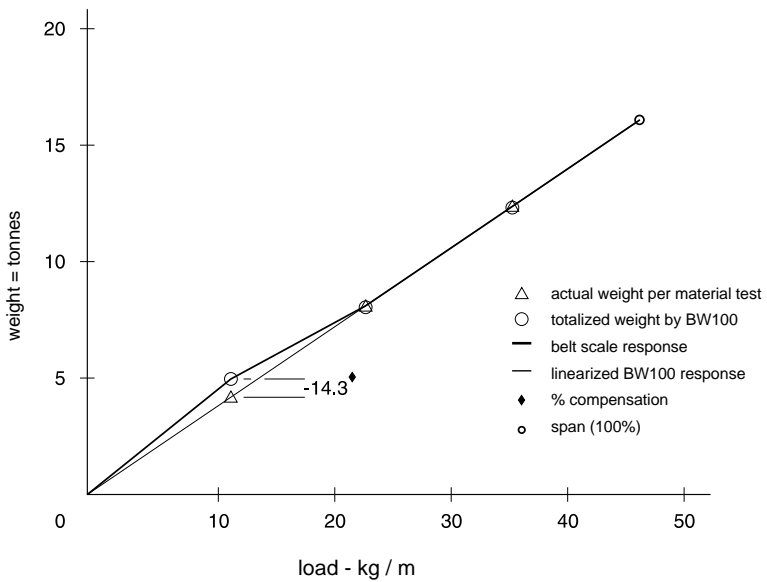



OPERATION

LOAD SENSING

In order for the BW100 to calculate rate and hence totalize material flow along the belt conveyor, a load signal representative of weight of material on the belt is required. The load signal is provided by the belt scale. The BW100 is compatible with belt scales fitted with one or two strain gauge type load cells.

Refer to Specifications and Installation\Load Cell for belt scale requirements and connection.

SPEED SENSING

In order for the BW100 to calculate rate and hence totalize material flow along the belt conveyor, a speed signal representative of belt speed is required. In constant speed applications (no speed sensor), the BW100 can be programmed to provide an internal speed signal. This is achieved by entering the design speed (P014) and providing a jumper across speed input terminals (TB1-5/6). Speed constant (P015) defaults to 100.

For optimum accuracy of the weighing system, both constant and variable speed applications, a speed sensor is required. Again, the design speed and speed constants need to be programmed, however the jumper across the speed input has to be removed and the speed sensor connected.

Refer to Specifications and Installation\Speed Sensor for speed sensor requirements and connection.

MODES OF OPERATION

Run is the normal or reference mode of operation. It continuously processes the load signal from the belt scale to produce internal load and rate signals, which are in turn used as the basis for totalization, mA output and relay control. The run display is programmed (P081) to scroll through rate, totalization, load and speed; either manually by pressing the enter key, or automatically. A bar graph is continuously displayed. It is proportional to the analog output as programmed (see Analog Output).

From the run mode, access to the program mode, and zero and span calibration is made.

The program mode allows viewing and, with security permission (P000), changing parameter values. During program, run mode functions are still active, i.e.: rate, relay, analog output and totalization. Error interrupts are suppressed and the bar graph is disabled.

If the program mode is left idle for a period of ten minutes, it automatically reverts to the run mode.

DAMPING


Damping (P080) provides control over the speed at which the displayed readings and output functions respond to changes in their respective input function; load, speed and the internal rate signals. Changes in the displayed rate of material flow, material loading and belt speed are controlled by the damping. Relay alarm functions based on input functions of flow, load and speed, respond to the damped value.

If the specific mA output damping parameter (P220) is enabled (value other than 0), then the damping (P080) *as it pertains to the mA function* is overridden, and the output value and bar graph respond independently at the specified mA output damping rate (P220).

ANALOG OUTPUT

The BW100 provides one isolated analog output. The output can be assigned (P201) to represent rate, load or speed. The output range can be set to 0 - 20 mA or 4 - 20 mA (P200). The 0 or 4 mA value corresponds to empty or zero condition, whereas the 20 mA value corresponds to the associated design value: rate (P011), load (P952) or speed (P014). The analog output can be limited for over range levels of 0 mA minimum and 22 mA maximum (P212 and P213 respectively). The output 4 and 20 mA levels can also be trimmed (P214 and 215 respectively) to agree with a milliammeter or other external mA input device.

The BW100 LCD provides a bar graph as a function of analog output. It displays the mA value as percentage of the mA range.

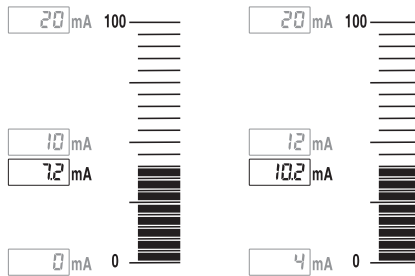

The mA output value can be tested using parameter P911. Refer to Parameter Description\P911.

RELAY OUTPUT

The BW100 offers one single pole double throw (SPDT) relay that can be assigned (P100) to one of the following alarm functions:


- » rate: relay alarms on high and/or low material flow rate.
- » auto zero: relay alarms when an attempted auto zero calibration reports an out of range condition (E9).
- » speed: relay alarms on high and/or low belt speed.
- » load: relay alarms on high and or low belt load.
- » error: relay alarms on any error condition as it is reported.
Refer to Appendices \ Troubleshooting.

Except for alarm on 'auto zero' and 'error', the high and low alarm setpoints (P101 and P102 respectively) are required and must be entered in the appropriate units.

The on / off actuation at both setpoints is buffered by the damping (P080) and the programmable dead band (P117), to prevent relay chatter due to fluctuations. The relay is normally energized; i.e. the normally closed (n.c.) contact held open. Upon an alarm condition, the relay is de-energized and the alarm icon on the BW100 display appears. Once in alarm, the relay and icon remain in alarm status until the alarm condition is removed.

Example:

P014 = 2m/s, design speed
P100 = 3, belt speed
P101 = 100% (2m/s)

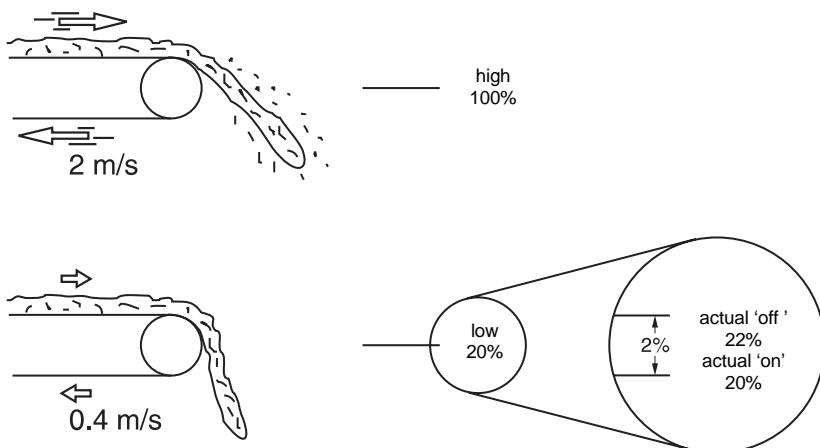

alarm 'on' is with relay de-energized

TOTALIZATION

The totalization function is based on the internal rate (mass per unit time) signal proportional to belt speed and load on the associated belt scale. It is not affected by the damping function (P080). The rate signal is sampled several times a second to accurately count the mass of material conveyed. The count is held in the master totalizer used to increment the internal totalizers and to produce a pulse signal for the remote totalizers.

The BW100 provides four separate totalizer functions: internal totalizer 1, internal totalizer 2, remote totalizer 1 and remote totalizer 2.

To avoid totalizing material at low flow rates, the totalizer drop out limit (P619) is set to a percentage of the design rate. Below this limit, totalization stops. When material flow returns to a rate above the drop out limit, totalization resumes.

Totalizer resolution or count value is set by the respective control parameters, P631 - P639. If the resolution selected causes the totalizer to lag behind the count rate, an E2 error is displayed after making the parameter entry. The error is rectified by selecting a greater resolution value.

e.g.: *internal totalizer 1*

given: P005 = 1 (t/h)
P631 = 5

then: totalizer count increments by 10 for each 10 metric tonnes registered



external totalizer 1

given: P005 = 1 (t/h)
P638 = 5

then: contact closure occurs once for every 10 metric tonnes registered

For remote totalization, the contact closure duration is set by the respective control parameters, P643 and P644. The value is automatically calculated upon entry of the design rate (P011) and remote totalizer parameters (P638 and P639), so that the duration of contact closure allows the relay response to track the total up to the design rate. The value can be changed to suit specific contact closure requirements, such as in the case of programmable logic controllers. If an E2 error is displayed, P638 or P639 has to be increased.

The totalizers are reset through the master reset (P999), the totalizer reset (P648) or through the keypad.

- » master reset: the reset of all totalizer functions is included in the master reset.
- » totalizer reset: totalizer reset can be used to resets internal totalizers 1 and 2, or totalizer 2 independently.
- » keypad: pressing   simultaneously while in the run mode resets internal totalizer 1, as well as the internal counts for both remote totalizers.

Placing the internal totalizers on to the display scroll of the run mode is controlled by the totalizer display parameter (P647); displaying either one or both totalizers.

AUTO ZERO

The Auto Zero function allows a zero calibration to be initiated automatically under the following conditions.

- the auto zero input (TB1-9/10) is in a closed state; jumper or remote switch
- the load is less than 2% of the design load


If the resulting zero deviation is less than an accumulated 2% from the last operator initiated zero, the auto zero is accepted.

If the deviation is greater than an accumulated 2%, an E9 error is displayed and the relay, if so programmed, goes into alarm (refer to Operation\Relay Output). The E9 error is cleared after five seconds.

If material feed resumes during an auto zero function, the totalizing function is maintained.

COMMUNICATION

The BW100 bipolar current loop provides long distance communication to an RS-232 or RS-422 device via a local Milltronics CVCC or BIC-2 interface.

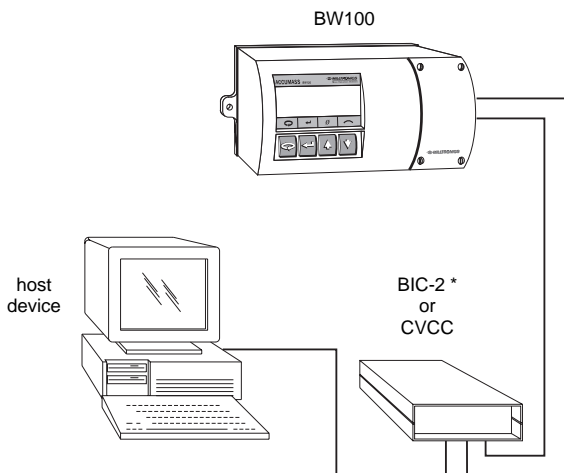

* maximum 6 BW100 per BIC-2

The BW100 communication port (TB1-21 to 25) is software set for baud (P751) and mode enable (P760). Refer to Installation\Communication for wiring details.


**If communicating via Milltronics Dolphin software,
the baud rate must be set to '4800'.**

PROTOCOL

Protocol refers to the format, sequence and value of the data fields used in communication messages. Each data field of a BW100 message contains one or more bytes of ASCII binary code.

Each byte contains:

- » 8 data bits
- » no parity bit
- » 1 stop bit

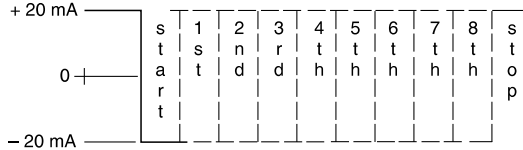

DATA FIELD DESCRIPTIONS

The following data fields are used.

som

BW100 start of message, ASCII character = STX (Hex Value = 02).

DEVICE

Identifies the BW100 to which the message applies. The device is a 2 character number that equals the Unit I.D. code, (P761). ASCII characters = 00 to 15.

MT

Identifies the 2 character message type transmitted, ASCII characters:

- 50 = material flow rate
- 51 = material load
- 52 = belt speed
- 53 = totalizer 1, internal
- 54 = totalizer 2, internal

READING

Contains the measurement value in the engineering units of measure selected during BW100 programming. The number of bytes in this data field varies dependent upon the reading value. Up to 8 ASCII characters including the decimal point may be transmitted.

UNITS

Three ASCII characters identify the totalizer engineering units (MT=53 and MT=54). The first character is always a space. The remaining characters may be:

- t = tonnes
- T = tons
- LT = long tons
- kg = Kilograms
- lb = pounds

eom

BW100 end of message, ASCII character = CR (Hex Value = 0D).

MESSAGE REQUESTS

Message requests must be transmitted from the host to the BW100 in the following format.

som DEVICE MT eom

Example:

Data Field	ASCII Character	Example Description
som	STX	start of message
DEVICE	01	for BW100 # 1
MT	50	material flow rate request
eom	CR	end of message

MESSAGE RESPONSES

The BW100 response to a flow rate (MT=50) load (MT=51) or speed (MT=52) message request is in the following format.

som DEVICE MT READING eom

Example:

Data Field	ASCII Character	Example Description
som	STX	start of message
DEVICE	00	from BW100 # 0
MT	50	material flow rate response
READING	392.5	is 392.5
eom	CR	end of message

The response to a material total (MT=53) message request is in the following format.

som DEVICE MT READING UNITS eom

Example:

Data Field	ASCII Character	Example Description
som	STX	start of message
DEVICE	01	from BW100 # 1
MT	53	material total response
READING	129.2	is 129.2
UNITS	t	metric tonnes
eom	CR	end of message



PARAMETER DESCRIPTION

P000 lock

Locks out the programming 'change value' function such that the values of P001 through P999 cannot be changed. This however does not prevent the 'select' function from use; i.e. for viewing values. Programming is locked out if the value of P000 is other than 1954.

entry: 1954 = unlocked
4954 = locked

Quick Start, P005 to P017

'Quick Start' is the minimum parameter programming required before attempting a calibration and successful entry into the run mode.

P005 units

Determines the units for programming and measurement.

entry: 1 = t/h, tonnes per hour
2 = kg/h, kilograms per hour
3 = LT/h, long tons per hour
4 = T/h, short tons per hour
5 = lb/h, pounds per hour

Changing this parameter does not affect the rate (P011), belt speed (P014) or belt length (P016) parameters. These parameters should be re-entered for conformity in units.

t = 1000 kg
LT = 2240 lb.
T = 2000 lb.

P011 design rate

Specifies the design rate of material flow for the belt scale.

enter the design rate from the supplied design data sheet

P014 design speed

Specifies the design speed for the conveyor belt.

Speed units are: metre/s if P005 = 1 or 2
 feet/min if P005 = 3, 4 or 5

P015 speed constant

This value multiplied with the speed sensor frequency, calculates the actual belt speed.

entry: **If speed input is wired for constant speed
 (TB1 5/6 jumpered), value defaults to '100'.**

enter the speed constant = from the supplied design data sheet

or

= $\frac{\text{speed sensor pulses per revolution}^*}{\text{pulley circumference (m or ft)/ revolution}}$

* refer to speed sensor nameplate or consult Mass Dynamics or their agent

P016 belt length

The length of the conveyor belt (one belt revolution).

Length units are: metre if P005 = 1 or 2
 ft if P005 = 3, 4 or 5

enter the belt length

P017 test load

The load to be referenced when performing a span.

Load units are: kg/m if P005 = 1 or 2
 lb/ft if P005 = 3, 4 or 5

End of 'short program' parameters. A calibration can now be performed.

P018 speed constant adjust

This parameter allows adjustment to the speed constant (P015).

Initially, this parameter displays the dynamic speed of the belt. If the displayed speed is not equal to the actual speed, enter the actual belt speed.

For speed sensor applications, the value of P015 is automatically adjusted.

For constant speed (TB1 5/6 jumper) the value of P014 is automatically adjusted.

P019 manual span adjust

This parameter allows adjustment to the span calibration.

The adjustment value is generally determined by performing material tests. Refer to Recalibration\Material Tests.

enter the calculated adjustment

P022 minimum speed frequency

Sets the minimum frequency that the speed sensor can reliably read. Signals at low frequencies are erratic, adversely affecting the performance of the weighing system.

entry: 1 = 1 Hz
2 = 2 Hz

note: at 1 Hz, it takes 1 sec before defaulting to 0 speed
at 2 Hz, it takes 0.5 sec before defaulting to 0 speed

P080 damping

Sets the speed of response to which the displayed readings (rate, load and speed), and outputs (alarm and mA) react to change..

Effect of damping (P080) on mA output can be overridden by mA output damping (P220).

The greater the damping value, the slower the response.

enter damping value, range 1 - 9999

P081 display mode

Sets the display mode. Normally, the display shows rate, or the last manually selected function. If set to alternating, the display alternates between rate and totalizer (1 and/or 2, as programmed by P647).

entry: 0 = normal
1 = alternating

Relay/Alarm Function, P100 - P117

*These parameter are specific to the use of the relay/alarm function.
Refer to Operation\Relay Output.*

P100 relay set up

Sets the alarm mode for the relay.

entry: 0 = off
1 = rate
2 = auto zero
3 = belt speed
4 = belt load
5 = error

P101 high alarm

Sets the high alarm setpoint for relay functions P100 = 1, 3 or 4.

enter the value in % of full scale

P102 low alarm

Sets the low alarm setpoint for relay functions P100 = 1, 3 or 4.

enter the value in % of full scale

P117 alarm dead band

Sets the dead band to prevent relay chatter due to fluctuations at the high or low setpoint.

enter the value in % of full scale

End of relay/alarm parameters.

mA output parameters, P200 - P220

*These parameters are specific to the use of the mA output.
Refer to Operation \ mA Output for details.*

P200 mA range

Sets the range for the mA output.

entry: 1 = 0 - 20 mA
2 = 4 - 20 mA

P201 mA function

Assigns the mA output to track one of the integrator functions.

entry: 1 = rate
2 = load
3 = speed

P212 mA min limit

Limits the lower mA range (0 or 4 mA) to a minimum output value.

enter limit value, range 0 - 22

P213 mA max limit

Limits the upper mA range (20 mA) to a maximum output value.

enter limit value, range 0 - 22

P214 4 mA trim

Adjusts the 4 mA output level to agree with a milliammeter or other external mA input device.

enter trim value, range 0 - 9999

P215 20 mA trim

Adjusts the 20 mA output level to agree with a milliammeter or other external mA input device.

enter trim value, range 0 - 9999

P220 mA output damping

Sets the speed at which the mA output reacts to change.

The greater the damping value, the slower the response.
If the value is 0, the mA output assumes the damping set in P080.

enter the damping value, range 0 - 9999

End of mA output parameters.

Load Cell Balancing Parameters, P291 - P295

These parameters are used for verifying or balancing the load cells (2) on the associated conveyor belt scale. Refer to Start Up\Balancing for details and procedure for use of these parameters.

P291 calculator input 1

This register displays the count associated with the summation of load cell A and B signals, when balancing the A and B load cells of the associated belt scale.

P292 calculator input 2

This register displays the count associated with the load B signal, when balancing the A and B load cells of the associated belt scale.

P293 calculator input 3

This register displays the count associated with the load cell B signal, when balancing the A and B load cells of the associated belt scale.

P294 calculator input 4

This register displays the count associated with the summation of load cell A and B signals, when balancing the A and B load cells of the associated belt scale.

P295 load cell balance

Used in conjunction with balance calculator parameters (P291 - P 294), this parameter displays the adjustment required to complete the load cell balance procedure.

End of balancing parameters

P341 run time

The cumulative days that the application device has been in service. The time is recorded once daily in a non-resettable counter. Periods of less than 24 hr. are not recorded, nor accumulated.

P350 calibration security

This parameter provides additional security to the global lock (P000).

entry: 0 = view parameters, perform zero and span, no reset of totalizer 1
1 = same as level 0, but cannot perform span
2 = same as level 0, but cannot perform zero and span

P359 factoring

Factoring is used as a method of calculating the value of the test load (P017) to a new physical test weight.

entry: 0 = idle
1 = factor

Totalization is halted during the factoring procedure, and resumed only upon return to the run mode.

P360 calibration duration

Sets the number of belt revolutions to use during a zero or span calibration.

enter number of belt revolutions, range 1 - 99

P367 direct zero

This parameter allows the zero reference count to be viewed or entered directly.

Direct entry is intended for use when replacing software or hardware and it is not convenient to perform an initial zero at that time.

P368 direct span

This parameter allows the span reference count to be viewed or entered directly.

Direct entry is intended for use when replacing software or hardware and it is not convenient to perform an initial span at that time.

P370 zero limit

Sets the zero calibration deviation limit from the last initial zero. If the accumulated deviation exceeds the limit, the zero calibration is aborted (E3).

entry: 0 = $\pm 12.5\%$ of initial zero
1 = $\pm 2\%$ of initial zero

P377 initial zero

The initial zero is the reference zero to which all subsequent operator initiated zero calibrations are compared in determining whether they have deviated beyond the zero limit (P370)

entry: 0 = idle
1 = initial zero

Refer to Recalibration\Initial Zero for use of this function.

P388 initial span

The initial span is the reference to which all subsequent span calibrations are compared in determining whether they have deviated beyond 12.5% of the initial span.

entry: 0 = idle
1 = initial span

Refer to Recalibration\Initial Span for use of this function.

Linearization Parameters, P390 - P396

These parameters are used to compensate for non-linear response of the weighing system to the BW100. Refer to Recalibration\Linearization for details and example on the use of these parameters.

P390 linearization

Enables or disables the linearization function.

entry: 0 = off
1 = on

P391 linearizer, point 1

enter the load, in units of P017, for point 1

P392 compensation, point 1

enter the calculated compensation, in percent, for compensation point 1

P393 linearizer, point 2

enter the load, in units of P017, for point 2

P394 compensation, point 2

enter the calculated compensation, in percent, for compensation point 2

P395 linearizer, point 3

enter the load, in units of P017, for point 3

P396 compensation, point 3

enter the calculated compensation, in percent, for compensation point 3

End of Linearization Parameters.

Totalization, P619 - P648

The following parameters are specific to the use to the BW100 totalizers.
Refer also to Operation\Totalization.

If the resolution (P631 - P639) selected would cause the totalizer to lag behind the count rate, a message E2 is displayed after making the entry.

Select a greater resolution value.

e.g. given: P005 = 1 (t/h)
P631 = 5

then: totalizer count increments by 10 for each 10 metric tonne registered

P619 totalizer drop out

This parameter sets the limit, in percent of design rate, below which material rates are not totalized.

The value of '0' is reserved to allow both negative and positive totalization.

enter drop out value in % of design rate

P631 totalizer 1 resolution, internal

This parameter sets the resolution of internal totalizer 1.

entry: 1 = 0.001 (one thousandth)
2 = 0.01 (one hundredth)
3 = 0.1 (one tenth)
4 = 1 (unit)
5 = 10 (x ten)
6 = 100 (x hundred)
7 = 1000 (x thousand)

P632 totalizer 2 resolution, internal

This parameter sets the resolution of internal totalizer 2.

entry: 1 = 0.001 (one thousandth)
2 = 0.01 (one hundredth)
3 = 0.1 (one tenth)
4 = 1 (unit)
5 = 10 (x ten)
6 = 100 (x hundred)
7 = 1000 (x thousand)

P638 totalizer 1 resolution, external

This parameter sets the resolution of external totalizer 1.

entry: 1 = 0.001 (one thousandth)
2 = 0.01 (one hundredth)
3 = 0.1 (one tenth)
4 = 1 (unit)
5 = 10 (x ten)
6 = 100 (x hundred)
7 = 1000 (x thousand)

P639 totalizer 2 resolution, external

This parameter sets the resolution of external totalizer 2.

entry: 1 = 0.001 (one thousandth)
2 = 0.01 (one hundredth)
3 = 0.1 (one tenth)
4 = 1 (unit)
5 = 10 (x ten)
6 = 100 (x hundred)
7 = 1000 (x thousand)

P643 totalizer 1 contact closure, external

The value of this parameter represents a multiple of 32 ms of contact closure for remote totalizer 1. The value is automatically calculated upon entry of P1 (design rate) and P638 (totalizer 1 resolution, external) so that the duration of contact closure allows the transistor switch response to track the total, up to the design rate.

The value can be changed to suit specific contact closure requirements, such as in the case of programmable logic controllers. If a message E2 is displayed, P638 has to be increased.

entry: 1 = 32 ms	6 = 192
2 = 64	7 = 224
3 = 96	8 = 256
4 = 128	9 = 288
5 = 160	

P644 totalizer 2 contact closure, external

The value of this parameter represents a multiple of 32 ms of contact closure for remote totalizer 2. The value is automatically calculated upon entry of P1 (design rate) and P639 (totalizer 2 resolution, external) so that the duration of contact closure allows the transistor switch response to track the total, up to the design rate.

The value can be changed to suit specific contact closure requirements, such as in the case of programmable logic controllers. If a message E2 is displayed, P639 has to be increased.

entry: 1 = 32 ms	6 = 192
2 = 64	7 = 224
3 = 96	8 = 256
4 = 128	9 = 288
5 = 160	

P647 totalizer display

Selects the totalizer combination to be displayed, either manually through the scroll display key or automatically by control of the display mode (P081).

entry: 1 = totalizer 1
2 = totalizer 2
3 = totalizers 1 and 2

P648 totalizer reset, internal

Resets the internal totalizers.

entry: 0 = idle
1 = reset totalizer 2
2 = reset totalizers 1 and 2

End of Totalization parameters.

Communication, P751 - P761

*These parameters are specific to the use of the communication parameters.
Refer also to Appendices\Communication.*

P751 baud rate

Sets the baud rate for the proprietary bi-polar current loop. This baud rate is not applicable to communication via Milltronics Converter.

entry: 300, 1200, 2400, 4800 or 9600 baud

4800 baud is required for Dolphin communications over the bi-polar current loop.

P760 communication mode

Selects the communication mode.

- » bi-polar current loop: interface with the host device (PLC or computer) is made through the Milltronics BIC-2 or CVCC. Refer to Operation\Communication.
- » infrared link: communication is made using the Milltronics Converter.
- » maintenance: communication is made via the bi-polar current loop for run mode operations and infrared link for program mode operations

entry: 1 = bipolar current loop
2 = infrared link
3 = maintenance

P761 identification number

Sets the identification number for the unit.

enter the desired identification number, range 0 - 15

End of communication parameters.

Test and Diagnostic, P900 - P951

These parameter are used for test and diagnostic purposes.

P900 software revision

Displays the EPROM (Flash ROM) software revision level.

P901 memory


Tests the memory. Test is initiated by scrolling to the parameter or repeated by 'pressing enter'

display: PASS = normal
FAIL = consult Mass Dynamics

P907 programmer interface

Tests the infrared communications link. Test is initiated by scrolling to the parameter or repeated by 'pressing enter'.

display: PASS = normal
FAIL = consult Milltronics

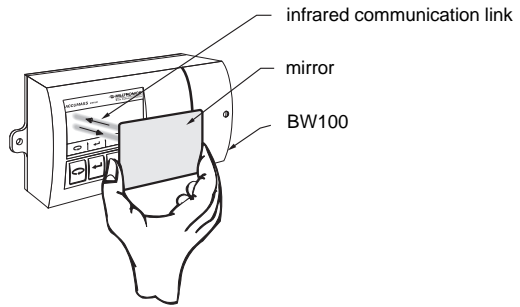

P911 mA output value

Displays the value from the previous measurement. A test value can be entered and the displayed value is transmitted to the output. Upon returning to the run mode, the parameter assumes the actual mA output level.

- P940 load cell 'A', mV_{in}
Displays the mV signal input from the load cell. Range 0.00 - 60.00 mV.
- P941 load cell 'B', mV_{in}
Displays the mV signal input from the load cell. Range 0.00 - 60.00 mV.
- P942 V/F converter, V_{in}
Displays the input voltage to the voltage to frequency converter.
Range 0 - 3.98 V
- P943 V/F converter, f_{out}
Displays the output frequency of the voltage to frequency converter.
Range 0 - 131,072
- P944 power sensor
Displays a voltage supply reference for diagnostic purposes.
- P949 diagnostic errors
Enables or disables diagnostic error checking, E101 - E104
entry: 0 = disable
1 = enable
Refer to Troubleshooting.
- P950 zero register
Registers the number of zero calibrations that have been done since the last master reset.

P951 span register

Registers the number of span calibrations that have been done since the last master reset.


P952 design load

Displays the value of the design load, which corresponds to the full scale value for alarm and mA output functions. The design load is calculated, based on the design rate and design speed.

End of test and diagnostic parameters.

P999 master reset

Resets parameters and totalizers to their factory setting.

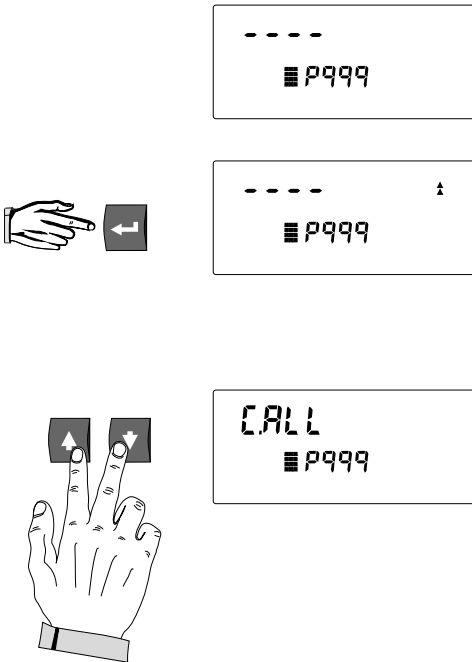



APPENDICES

ALPHABETICAL PARAMETER LIST

parameter *number*

Alarm Dead Band	P117
Baud Rate	P751
Belt Length	P016
Calculator Input 1	P291
Calculator Input 2	P292
Calculator Input 3	P293
Calculator Input 4	P294
Calibration Duration	P360
Calibration Security	P350
Communication Mode	P760
Compensation Point 1	P392
Compensation Point 2	P394
Compensation Point 3	P396
Damping	P080
Design Rate	P011
Design Speed	P014
Direct Span	P368
Direct Zero	P367
Display Mode	P081
Factoring	P359
High Alarm	P101
Identification Number	P761
Initial Zero	P377

Initial Span	P388
Linearization	P390
Linearizer Point 1	P391
Linearizer Point 2	P393
Linearizer Point 3	P395
Load Cell "A", mV in	P940
Load Cell "B", mV in	P941
Load Cell Balance	P295
Lock	P000
Low Alarm	P102
mA Function	P201
mA Output Damping	P220
mA Output Value	P911
mA Maximum Limit	P213
mA Minimum Limit	P212
mA Range	P200
mA Trim, 20	P215
mA Trim, 4	P214
Manual Span Adjust	P019
Master Reset	P999
Memory	P901
Minimum Speed Frequency	P022
Power Sensor	P944
Programmer Interface	P907
Relay Set Up	P100
Run Time	P341
Software Revision Number	P900
Span Register	P951
Speed Constant	P015
PL-531	78

Speed Constant Adjust	P018
Test Load	P017
Totalizer 1 Closure, External	P643
Totalizer 2 Closure, External	P644
Totalizer 1 Resolution, External	P638
Totalizer 2 Resolution, External	P639
Totalizer 1 Resolution, Internal	P631
Totalizer 2 Resolution, Internal	P632
Totalizer Display	P647
Totalizer Drop out	P619
Totalizer Reset, Internal	P648
Units	P005
V/F Converter, V in	P942
V/F Converter, f out	P943
Zero Register	P950
Zero Limit	P370

TROUBLESHOOTING

<i>message</i>	<i>diagnosis</i>	<i>action</i>
E1 (program)	security code required	enter access code into P000
E2 (run)	totalizer resolution too low	increase value (P631 - P639)
E3 (run)	zero out of range	consider an initial zero P377, refer to Recalibration\Initial Zero
E4 (run)	span out of range	consider an initial span P388, refer to Recalibration\Initial Span
E5 (run)	parameter not entered	check parameters P005 - P017 for entry
E6 (run)	zero calibration required	do a zero calibration
E7 (run)	span calibration required	do a span calibration
E8 (program)	parameter value error	check that value is valid
E9(run)	auto zero out of range	auto zero has accumulated deviation beyond 2% from last operator initial zero. If error is not caused by material on belt, then do an operator initiated zero.
E10 (run)	rate or span out of range	loading on belt is 300% of rated load or greater. Investigate and if no mechanical cause, check to see if re-rating the design rate is required.
E11 (run)	speed greater than twice the design speed	check design belt speed against actual belt speed,check speed constant, perform speed constant adjust (P018) if necessary.
E12 (factoring)	span out of range	test load is either too low or beyond 100% of design load (P952). Replace test weight with a heavier or lighter weight and try factoring again.
E101 (run)	load cell 'A'	check wiring
E102 (run)	load cell 'B'	check wiring

E103 (run)	load cell	check wiring
E104 (run)	memory checksum	contact Mass Dynamics or their distributor
OF	no speed signal	check speed circuit or run conveyor

- » Error messages are cleared when the condition is remedied.
- » Run mode errors are suppressed during program mode, zero or span calibration.
- » Zero and span errors are cleared when zero or span is initiated. Errors that happen during the calibration require re-starting the procedure.
- » Program errors are cleared when any key is pressed.
- » The messages E101 through E104 can be turned off (P949).
- » The load cell errors are detected by certain conditions where it is apparent that the load cell is not functioning or incorrectly wired. It is not a conclusive test, since even with incorrect wiring, the resulting input from the load cell may be within a valid range.

MAINTENANCE

The BW100 requires no maintenance.

The external surface of the enclosure may be cleaned using a vacuum cleaner and a clean dry paint brush. The display window should be cleaned with a moist non-abrasive cloth.

It is a good idea to check the associated load sensing device, according to its instruction manual.

SOFTWARE UPDATES

The software can be updated from a floppy disk by use of a PC (IBM Compatible) with Milltronics Dolphin software. It is recommended that a reset (P999) is done after the software update followed by zero and span calibrations.

Direct zero entry (P367) and direct span entry (P368) will suffice in lieu of dynamic zero and span calibrations. Therefore, zero and span counts should be recorded prior to doing the software update.

Program Record		
	Parameter	Value
P005	Units	
P011	Design Rate	
P014	Design Speed	
P015	Speed Constant	
P016	Belt Length	
P017	Test Load	
P018	Speed Constant Adjust	
P019	Manual Span Adjust	
P022	Minimum speed Frequency	
P080	Damping	
P081	Display Mode	
P100	Relay Set Up	
P101	High Alarm	
P102	Low Alarm	
P117	Alarm Dead Band	
P200	mA Range	
P201	mA Function	
P212	mA Min Limit	
P213	mA Max Limit	
P220	mA Output Damping	
P341	Run Time	
P350	Calibration Security	
P360	Calibration Duration	
P367	Direct Zero	
P368	Direct Span	
P370	Zero Limit	
P390	Linearization	
P391	Linearizer, Point 1	
P392	Compensation, Point 1	
P393	Linearizer, Point 2	
P394	Compensation, Point 2	
P395	Linearizer, Point 3	
P396	Compensation, Point 3	
P619	Totalizer Dropout	
P631	Total 1 Resolution, Int	
P632	Total 2 Resolution, Int	
P638	Total 1 Resolution, Ext	

Program Record

Parameter		Value
P639	Total 2 Resolution, Ext	
P643	Total 1 Closure, Ext	
P644	Total 2 Closure, Ext	
P647	Totalizer Display	
P648	Totalizer Reset, Int	
P751	Baud Rate	
P760	Communication Mode	
P761	Identification Number	
P900	Software Rev.#	
P949	Diagnostic Errors	
P950	Zero Register	
P951	Span Register	
P952	Design Load	

www.milltronics.com

MILLTRONICS

Siemens Milltronics Process Instruments Inc.
1954 Technology Drive, P.O. Box 4225
Peterborough, ON Canada K9J 7B1
Tel: (705) 745-2431 Fax: (705) 741-0466
www.milltronics.com

© Siemens Milltronics Process Instruments Inc. 2001
Subject to change without prior notice



7 M L 1 9 9 8 1 D J 0 1
Printed in Canada